

KOMMANDER™ — GLOVE BOX — FORD F-150 2015-2020
INSTALLATION GUIDE



1. REVISION

Description	Author	Revision	Date
First Publication	Eric Deschenes	1.0	August 27th 2020

2. COPYRIGHT

© Cyberkar® Systems, 2021

No part of the documentation materials accompanying this Cyberkar® Systems software product may be reproduced, transmitted, transcribed, stored in a retrieval system, sold, exploited commercially or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Cyberkar® Systems.

The contents of this documentation are protected by applicable copyright laws and will be distributed with a software that includes an end-user license agreement.

The information contained herein is provided for informational purposes only and is subject to change without notice. Cyberkar® Systems assumes no responsibility or liability for any errors or inaccuracies that may appear in the informational content contained in this document. Cyberkar® Systems, Cyberkar® and Kommander™ logos are trademarks of Cyberkar® Systems in the United States and Canada. Other trademarks used in this document may be trademarks of the manufacturers or vendors of the respective products.

Cyberkar® Systems
3026 rue Anderson, suite 202
Terrebonne, Québec, Canada
J6Y 1W1
Phone: 450-951-3080
Fax: 450-823-0192
<http://www.cyberkar.com>













Product picture as installed

TABLE OF CONTENTS

1.	REVISION	1
2.	COPYRIGHT	2
3.	INCLUDED IN THE KIT	5
4.	INSTALLATION PREPARATION.....	6
5.	OEM GLOVE BOX REMOVAL	7
6.	KOMMANDER™ GLOVE BOX INSTALLATION	8
7.	QUALITY ASSURANCE	9
8.	ANNEX: PLACEMENT TEMPLATE.....	10
9.	TECHNICAL SUPPORT	11

3. INCLUDED IN THE KIT

PART REF. #	PART NAME	QTY	ILLUSTRATION
1	Kommander™ Glove Box Door	1	
2	Glove Box backplate (comes already mounted)	1	
3	Pan Head Phillips Screws, 8-32 Thread, 3/8" long (comes already mounted)	6	
4	Push to close latch, lockable (comes already mounted)	1	

5	Glove box latch bracket	1	
6	Latch bracket screws	2	
7	Latch bracket shim kit (2)	1	No picture
8	Retaining cables	2	
9	Retaining cable screws	2	
10	Retaining cable flat washers	2	
11	Retaining cable lock nut	2	

4. INSTALLATION PREPARATION

The following guide will help prepare the area before the installation of the Kommander in-dash display kit. These instructions are based on a common example of a Ford F-150 2018.

- The basic installation of the Kommander glove box components should require approximately 0.5 hours of labor time.
- Using placement template (annex A of this document), install desired components on the glove box back plate (the plate can be removed to help manipulation).
- Label all OEM components removed during this installation using the Vehicle Identification Number (VIN). They can be stored away and re-installed when the vehicle is decommissioned.
- Interior panels and trims are stiff and prone to breaking when cold. Allow the vehicle interior compartment and cabin to reach room temperature before removing plastic trims and components.

5. OEM GLOVE BOX REMOVAL



1 Remove the 2 white pivot locks located under the dashboard.




2 Open and disengage the door by pressing the 2 tabs on each side, as shown above. Remove the rubber trim by pulling it backward.



3 Remove the 2 top screws and pull the upper glove box tray backward to unclip it.



4 Disconnect the light by unplugging its connector. Secure the cable with a tie wrap.

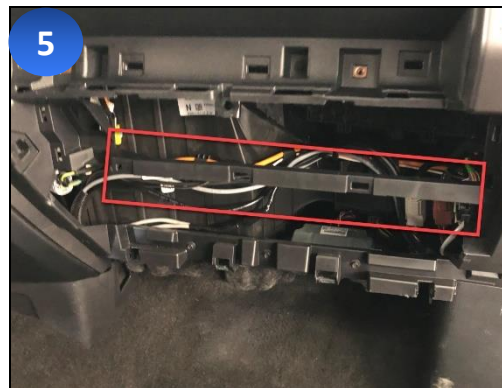

5 If required, the plastic part crossing the opening of the glove box can be cut to allow more mounting space.


6. KOMMANDER™ GLOVE BOX INSTALLATION




Install the Kommander glove box latch bracket (**part #5**) using provided screws (**item #6**). Place the 2 shims (**part #7**) between the vehicle and the bracket (thicker on right side) before to fix it.



Insert the Kommander Glove Box Door (**part #1**) into hinges and close the door.

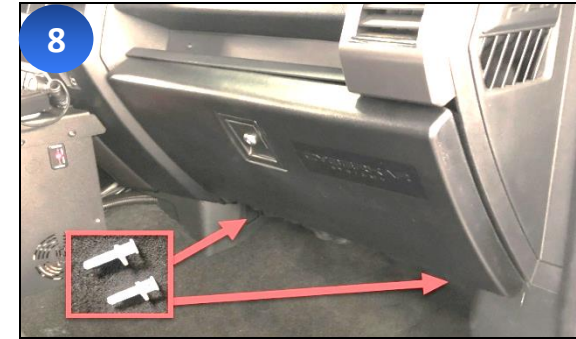

Insert white pivot lock removed at step 1, as the factory one, to secure the door in place.

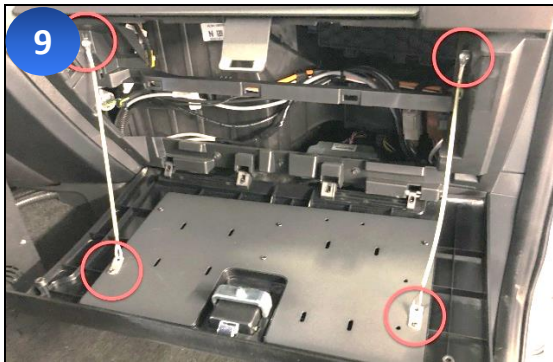

Open the door and attached the retaining cables (**item #8**) using screws, washers, and star lock nuts (**parts 9, 10 and 11**) to fix it on top rectangle opening, as shown above. Fix the other end of the cables on the door using back plate screws.

7. QUALITY ASSURANCE

Glove box operation test

- Open and close the door and ensure it is closing properly.

Corrective actions:



- Ensure latch is well installed.
- Ensure the latch is unlocked.
- A device installed on the door may be interfering with the vehicle. Relocate device(s) following Annex A.
- Ensure wires are properly routed and doesn't pinch when closing the door.

8. ANNEX: PLACEMENT TEMPLATE

Use this placement template to help positioning the equipment into the glove box compartment.

* Assuming the plastic bar has been cut, as per step #5.

**Take note that each square is 1 in X 1 in with 0.1 in gap between each cube.

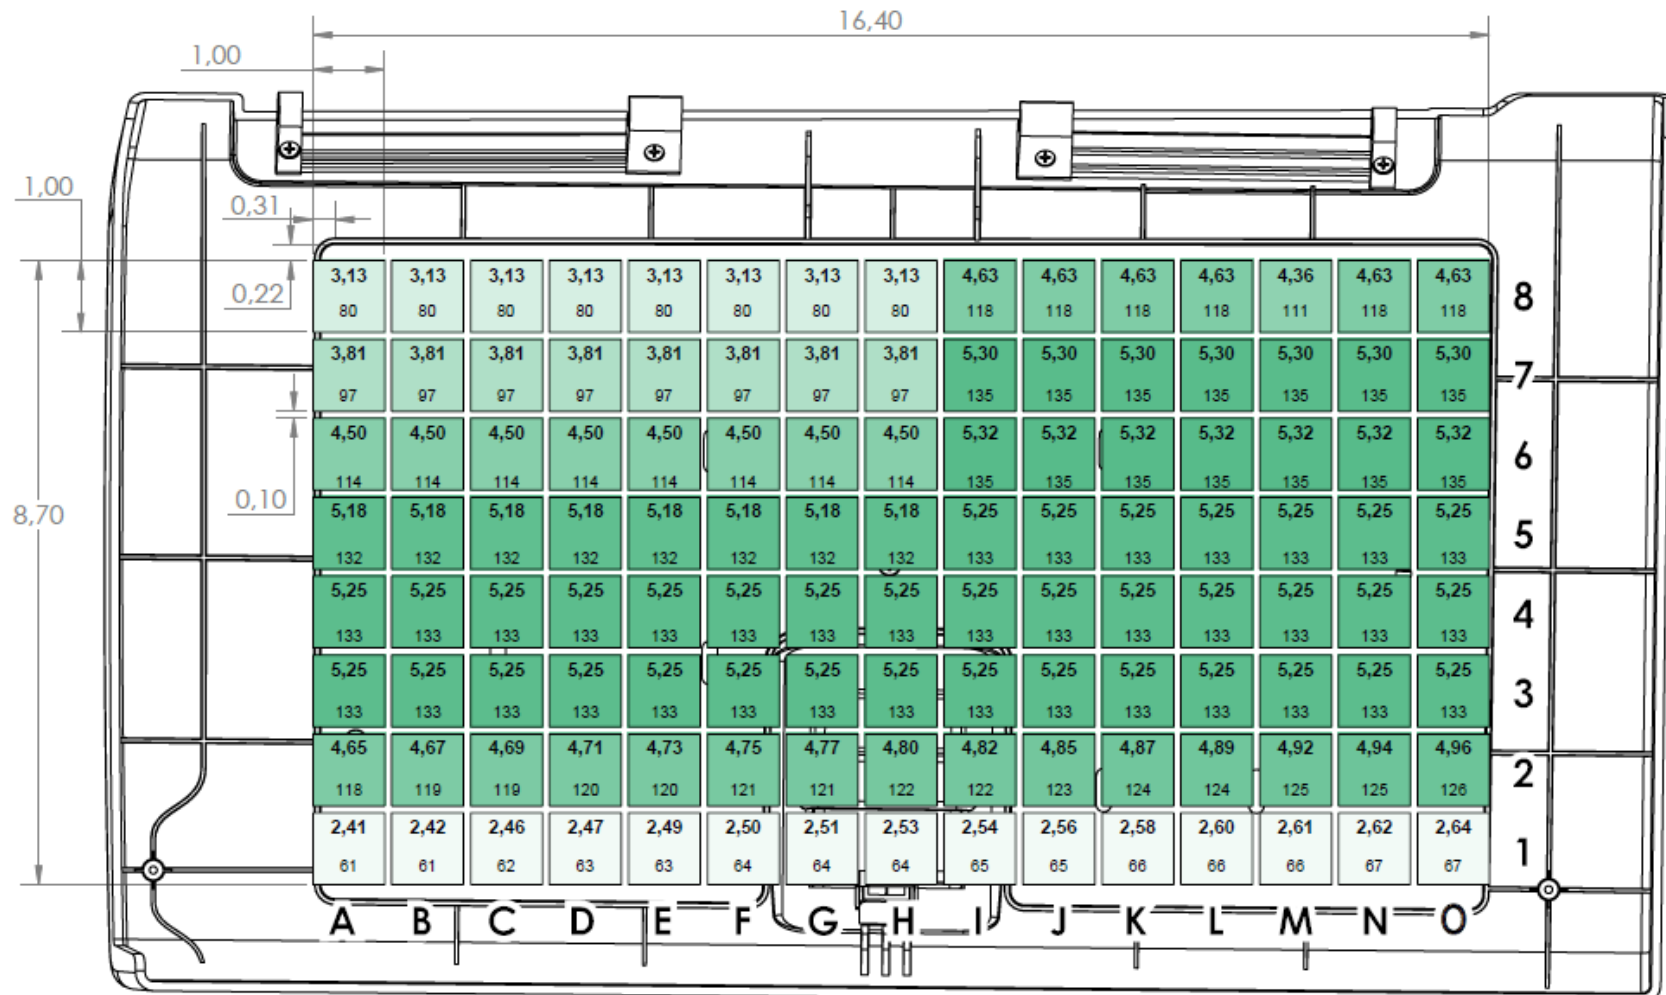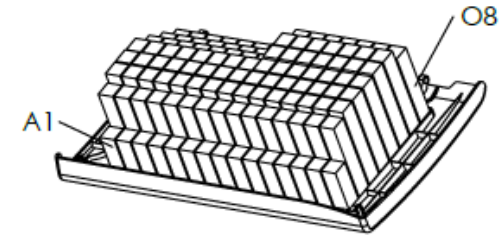

po
mm

9. TECHNICAL SUPPORT

Tech Support Team

Days/Hours of operation: Monday to Friday 8 a.m.—5 p.m. (EST)

Toll-free number: 1-855-884-6688

Escalation process: Email is used for escalations outside of hours of operation.

Email: support@cyberkar.com